

Adjusting Steering and Throttle Trims

Steering Trim

Adjust the direction wheel to center the tires. Use sub-trim (see your remote control' s instruction manual) if needed. If direction wheel is not close to its desired neutral position, and direction wheel cannot be centered using sub-trim, please take the following steps:

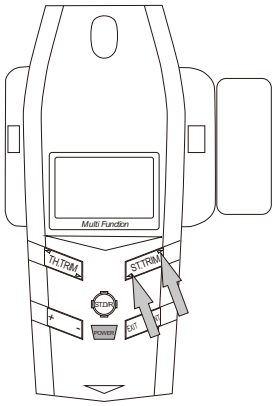

steering trim

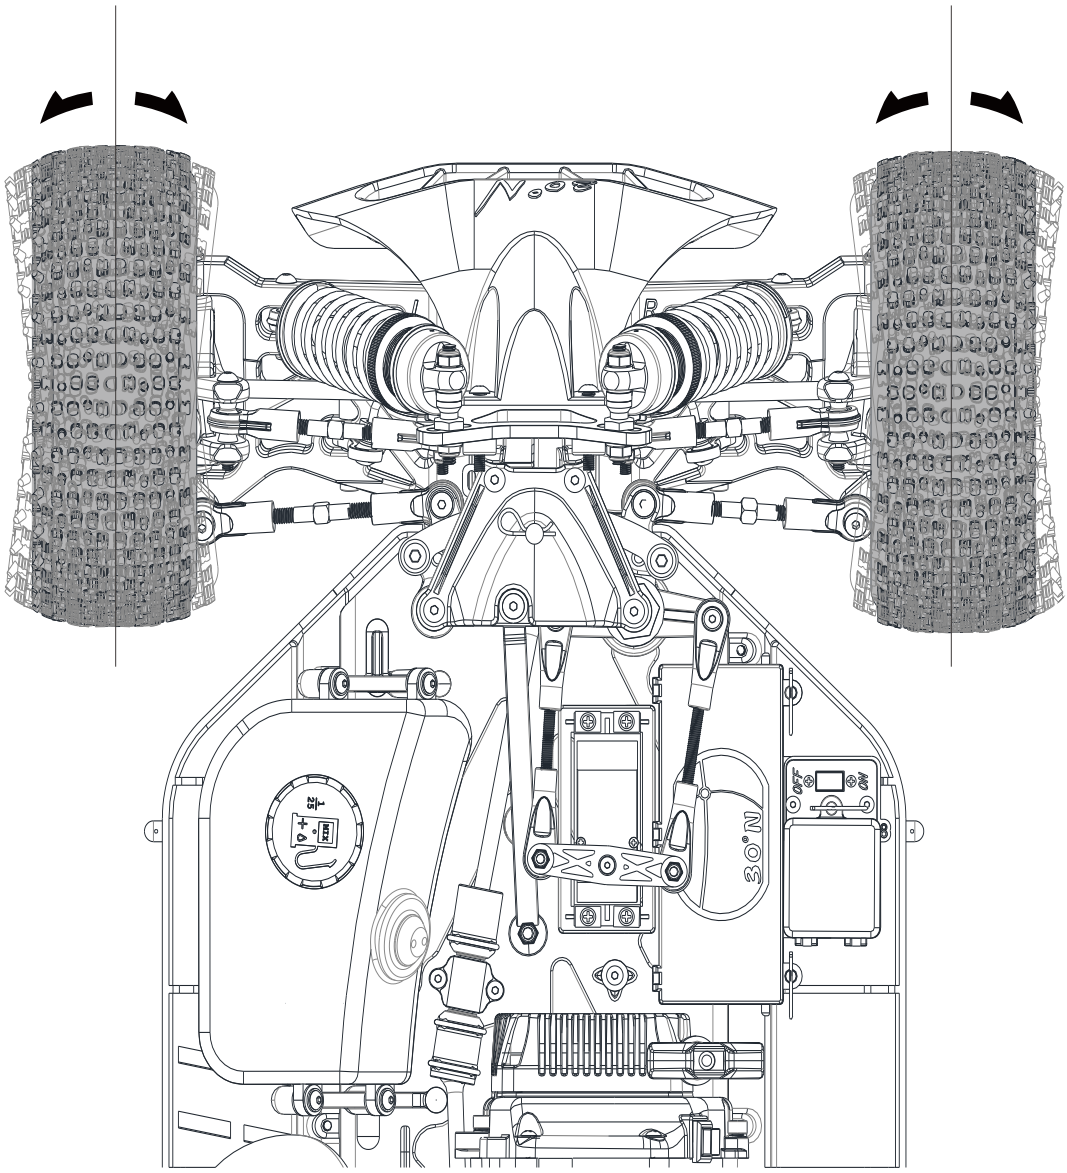

1. Make sure transmitter steering wheel and steering trim are set to "0" or neutral.
2. Remove the servo output rocker arm using a 2.0mm hexagon wrench, exchange angle to install the rocker arm in correct orientation.
3. Trim the steering adjust the steering wheel to the neutral position as described above.